


## Mortise lock

Requires larger, rectangular preparation on the door.

The centerline of the mortise lock is 3/8" lower than the centerline of the strike.

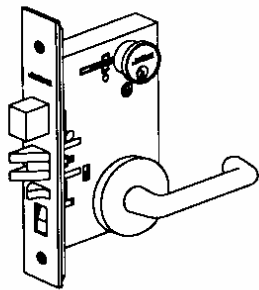

## Cylindrical lock

Requires smaller preparation on the door, typically used in residential settings.

